

3M G5 instructions to use relay 2 for a greeter

I have step by step instructions on how to accomplish the the menu board and greet detection on the new G5 base stations which is now replacing the XT-1. Some of us have already encountered these and the issues w/ the detection.

A quick summary of the instructions which will probably be all you need is as follows:

1. press and hold mode button while entering 1-2-3-4 (same code as XT-1)
 2. enter the system menu
 3. select option 12 Digital IO Set up
 4. arrow up once or down until you see Relay 1 and Relay 2
- * Relay 1 is for menu board detection and must read - RELAY 1 OUT VEH_DET_1

If it is not set to this setting it must be changed. It appears the G5 is factory set already to this setting when the unit is shipped.

*Relay 2 is for the greet detection and it must read- RELAY 2 OUT TALK 1 This setting will probably be the only one that will need to be changed and not factory set.

You must exit out of menu for changes to be activated

5. connect menu detection wiring to relay 1 normally open and common
connect greet detection wiring to relay 2 normally open and common
The relay connections are located on the bottom left terminals on the G5 base
(on the XT-1 the terminals were on the right)