


3M Intracom Operating Guide Model D-15

3M

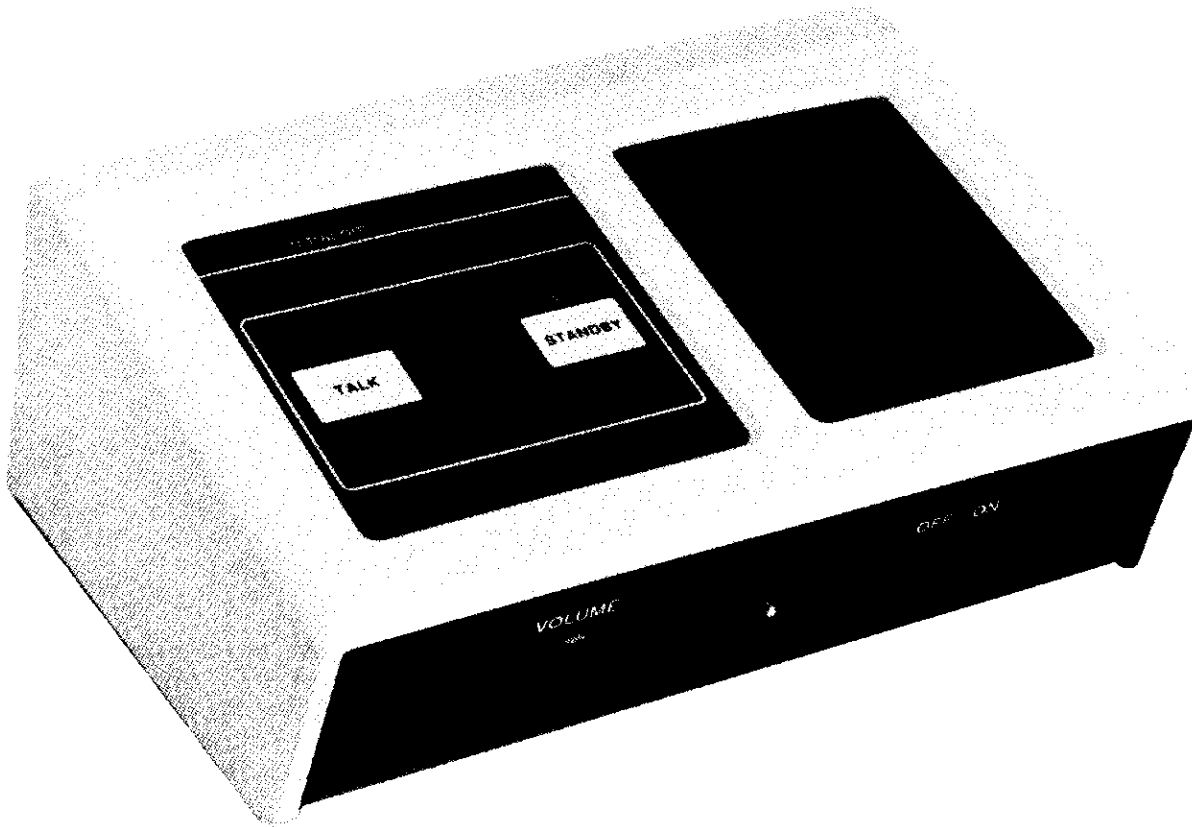

Model D-15 Mainstation
78-9236-3421-2

Important

Read this operating guide completely before operating the unit.

Introduction

The 3M Brand INTRACOM System is precision-built for reliable operation in continuous-duty applications. The Model D-15 provides maximum voice clarity under various noise conditions.

Installation


The System should be installed by an authorized 3M Sound Products dealer representative for proper connection.

Dealer Service

A network of authorized 3M Sound Products dealers can provide service backed by 3M's technical staff. For the name of your local dealer or technical assistance from 3M Company, contact:

Sound Products
3M Center, St. Paul, MN 55144-1000
Phone: 1-800-328-0033

Model D-15 Intracom Mainstation

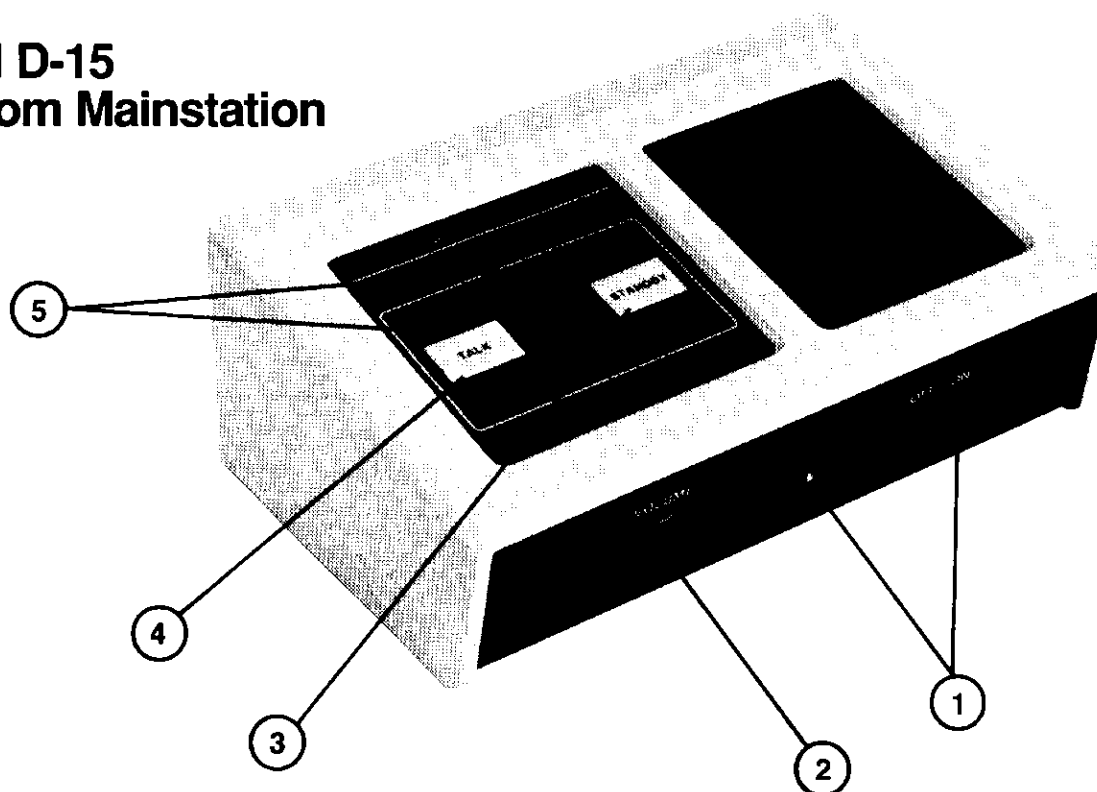

Operating Controls

- 1. Power Switch** Activates power to the Intracom. The green "power-on" light indicates the system is ready to operate.
- 2. Volume Control** Adjusts internal speaker (listen) sound level.
- 3. Standby Touch Switch** Silences Intracom audio to eliminate undesired pickup and reconnects optional music/message source to the external speaker. The standby mode releases automatically with vehicle detection or manually by touching the Touch/Talk switch.
- 4. Touch/Talk Switch** Controls talk/listen communications. Operator touches switch to talk and cancel alert tone. Operator releases switch to listen.
- 5. Indicator Lights** Yellow light indicates presence (vehicle) detection. Red light indicates TALK mode. Green light indicates LISTEN mode. Yellow light above "standby" comes on and other lights are extinguished when Intracom is muted by placing it in the "standby" mode.

Operating Instructions

(Be sure transformer is plugged in.)

- Slide Power Switch to right. (The green "power-on" light activates.)
- Touch Talk Switch while speaking. (The red "talk" light activates.)
- Release Talk Switch to listen. (The green "listen" light activates.)
- Adjust the thumbwheel (listen) volume control.
- Touch the Standby Switch. (The yellow "standby" light activates.)
- The "talk" and "tone" volume are set by the installer. For details, refer to installation instructions